

## **Decoding the Curb Submittal**

## **Actual vs. Nominal Dimensions**


<u>Actual dimension</u> – outside dimension of the curb after it is constructed, i.e. this is the dimension read with a tape measure

<u>Nominal dimension</u> – typically the curb cap dimension of the fan, the curb must be slightly undersized for proper fit

## How do the submittal dimensions correspond to the physical curb?

The table below is the dimensional table that prints on each curb submittal. Each column is marked with a letter that corresponds to a dimension outlined in the drawing.

**Did you know?** All Greenheck curb submittals call out the inside curb dimension and the flange dimension. This information can be very helpful when installing the curb, roofing material, and ductwork.

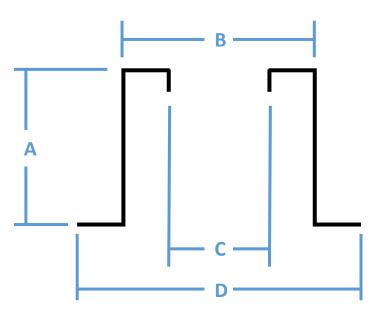

Ge	neral	

				Sizing	Undersizing	Weight	Shipped	
ID#	Tag	Qty	Model	Method	(in.) (lb)		Assembled	
1-1		1	GPI-22-G12	Nominal	1.5	19	Yes	

Dimensions	Α			В		С		D			
		Nominal	Nominal	Actual	Actual	Actual	Actual			Hinge	Hinge
	Curb	Outside	Outside	Outside	Outside	Inside	Inside	Flange	Flange	Base	Base
	Height	Width	Length	Width	Length	Width	Length	Width	Length	Width*	Length*
ID#	(in.)	(in.)	(in.)	(in.)	(in.)	(in.)	(in.)	(in.)	(in.)	(in.)	(in.)
1-1	12	22	22	20.5	20.5	17	17	24.5	24.5	21	21
*May not be a	pplicable										

Actual = Nominal – Undersizing