

Assembly Instructions

READ THROUGH THESE INSTRUCTIONS PRIOR TO STARTING ASSEMBLY.

Document Instructions


Use Document #1016005 with fastener kits 879422, 879423 and 879424. These kits are to be used with the Vektor-M series. The fasteners contained within the kit are to be used to attach the fan to the bypass air plenum (BAP). Use the images located within this document to locate the position of the fasteners on the unit.

Assembly Instructions

1. See Greenheck Document #464652 (Installation, Operation and Maintenance Manual: Vektor-MD, Vektor-MH and Vektor-MS) for full installation instructions.
2. See image below to locate bolt holes. Install moly-coated 316 stainless steel screws (provided) in all holes in plenum cap.

Tools Required

- Cordless drill (electric or pneumatic)
- 1/2 inch nut setter

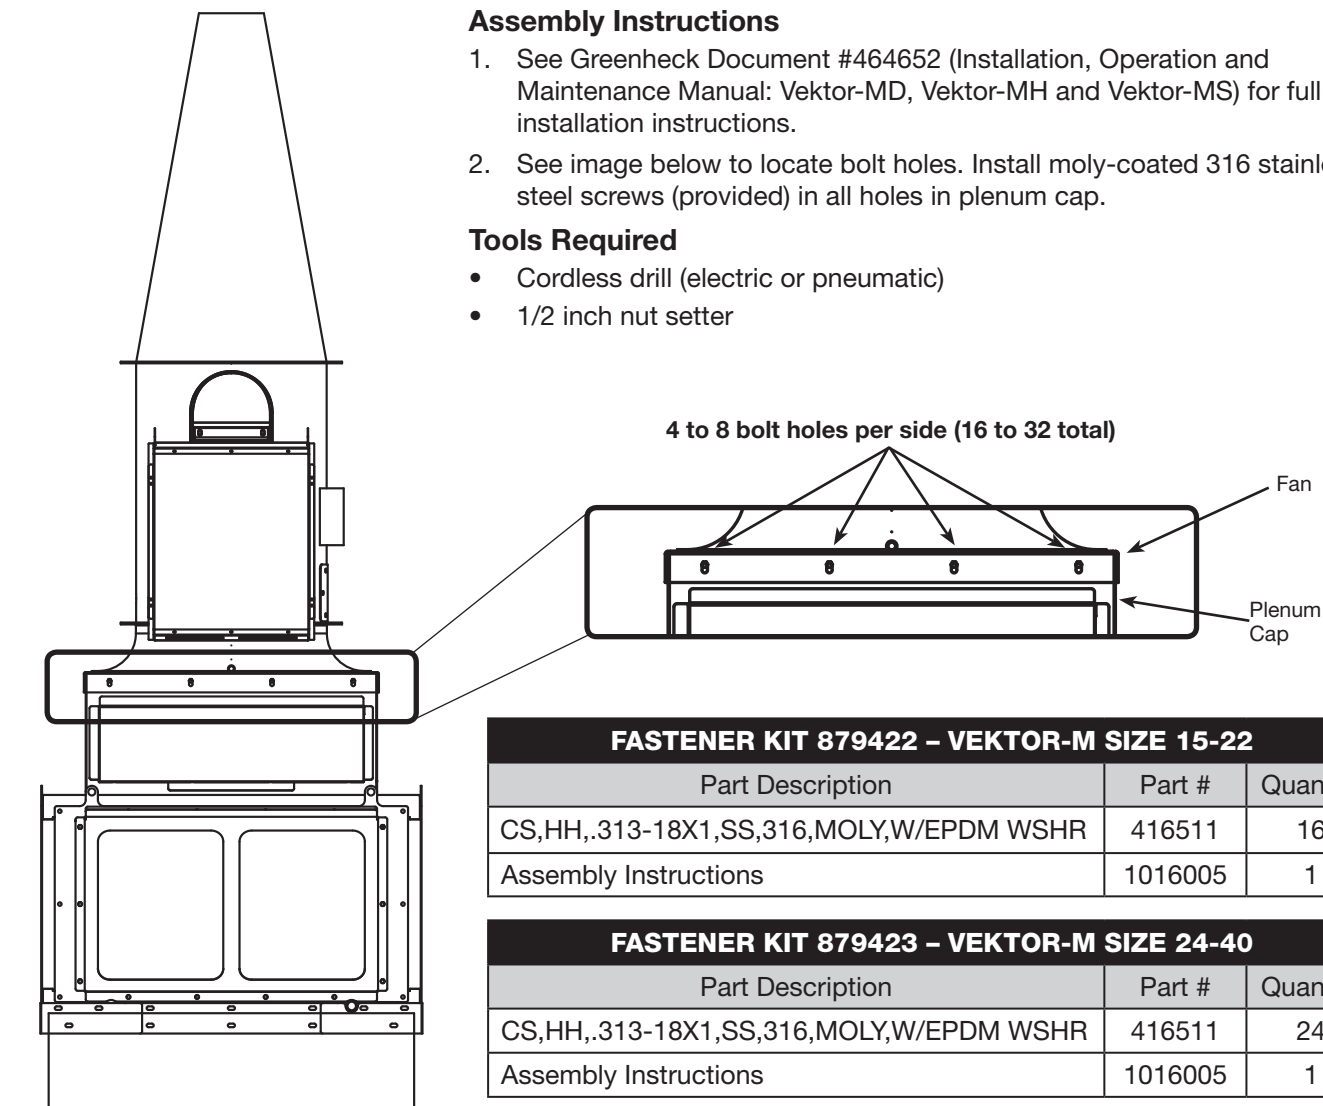

FASTENER KIT 879422 – VEKTOR-M SIZE 15-22

Part Description	Part #	Quantity
CS,HH,.313-18X1,SS,316,MOLY,W/EPDM WSHR	416511	16
Assembly Instructions	1016005	1

FASTENER KIT 879423 – VEKTOR-M SIZE 24-40

Part Description	Part #	Quantity
CS,HH,.313-18X1,SS,316,MOLY,W/EPDM WSHR	416511	24
Assembly Instructions	1016005	1

FASTENER KIT 879424 – VEKTOR-M SIZE 44-54

Part Description	Part #	Quantity
CS,HH,.313-18X1,SS,316,MOLY,W/EPDM WSHR	416511	32
Assembly Instructions	1016005	1