

Assembly Instructions

READ THROUGH THESE INSTRUCTIONS PRIOR TO STARTING ASSEMBLY.

Document Instructions


Use Document #1016011 with fastener kits 879433 and 879434. These kits are to be used with the Vektor-M series. The fasteners contained within the kit are to be used to join the interior sections of a modular roof curb. Use the images located within this document to locate the position of the fasteners on the unit.

Assembly Instructions

1. See Greenheck Document #464652 (Installation, Operation and Maintenance Manual: Vektor-MD, Vektor-MH and Vektor-MS) for full installation instructions.
2. The fastener kit includes fasteners for one interior section connection. If the fan array includes multiple interior section connections, multiple fastener kits will be supplied.
3. See image to the right to locate bolt holes. Install moly-coated 316 stainless steel screws (provided) in all holes in roof curb interior.

Tools Required

- Cordless drill (electric or pneumatic)
- 9/16 inch nut setter
- 9/16 inch wrench

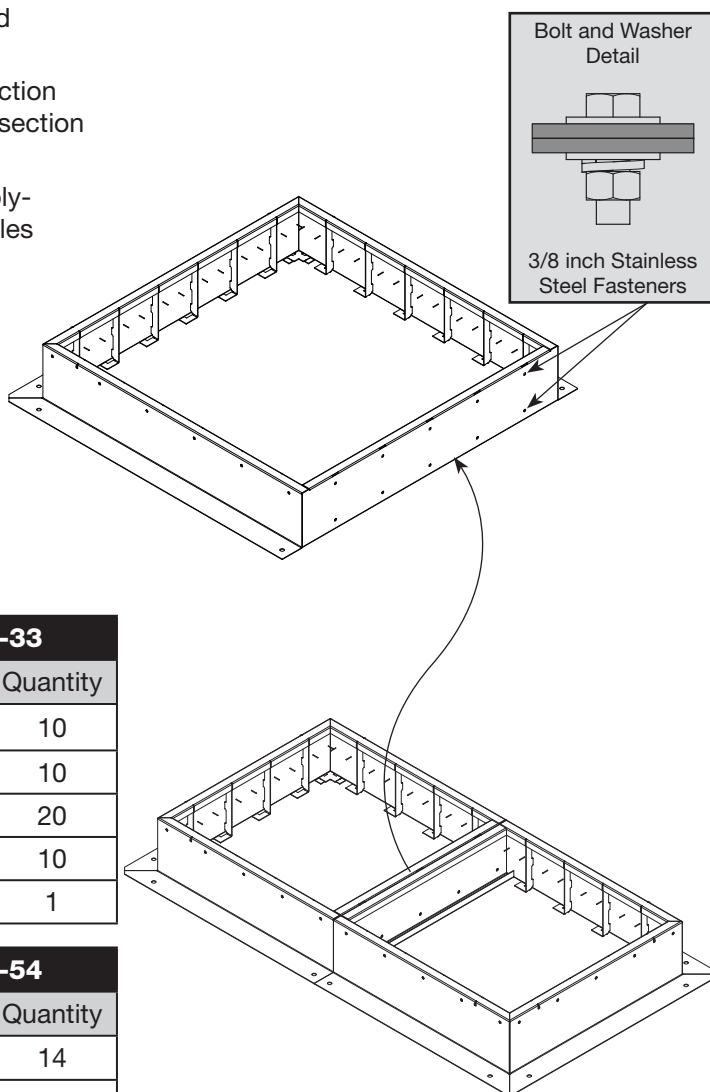

FASTENER KIT 879433 – VEKTOR-M SIZE 15-33

Part Description	Part #	Quantity
CS,HH,.375-16X1.25,SS,316,MOLY	415780	10
NUT,HEX,.375-16,SS,316	415799	10
WSHR,FLAT,.05X.406X.875,SS,316	415800	20
WSHR,LOCK,SPLIT,.375,SS,316	415810	10
Assembly Instructions	1016011	1

FASTENER KIT 879434 – VEKTOR-M SIZE 36-54

Part Description	Part #	Quantity
CS,HH,.375-16X1.25,SS,316,MOLY	415780	14
NUT,HEX,.375-16,SS,316	415799	14
WSHR,FLAT,.05X.406X.875,SS,316	415800	28
WSHR,LOCK,SPLIT,.375,SS,316	415810	14
Assembly Instructions	1016011	1