

Document 1016008 Vektor-MD Fastener Kit Dilution Nozzle to Fan Laboratory Exhaust System

Assembly Instructions

READ THROUGH THESE INSTRUCTIONS PRIOR TO STARTING ASSEMBLY.

Document Instructions

Use Document #1016008 with fastener kit 879429. This kit is to be used with the Vektor-MD model. The fasteners contained within the kit are to be used to attach the Vektor-MD dilution style nozzle to the fan body. Use the images located within this document to locate the position of the fasteners on the unit.

Assembly Instructions

1. See Greenheck Document #464652 (Installation, Operation and Maintenance Manual: Vektor-MD, Vektor-MH and Vektor-MS) for full installation instructions.


370046

and -416516


2. See image to the right to locate bolt holes and corresponding fasteners. Secure nozzle using moly-coated stainless steel hardware (provided).

Tools Required

- Cordless drill (electric or pneumatic)
- 9/16 inch nut setter
- 9/16 inch wrench
- 1/2 inch nut setter

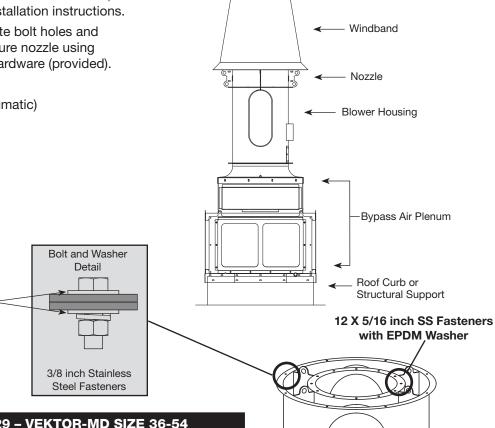

FASTENER KIT 879429 – VEKTOR-MD SIZE 36-54		
Part Description	Part #	Quantity
CS,HH,.375-16X1.5,SS,316,MOLY	415781	16
NUT,HEX,.375-16,SS,316	415799	16
WSHR,LOCK,SPLIT,.375,SS,316	415810	16
WSHR,FLAT,.0625X.375X1.25,NEOP	370046	32
WSHR,FLAT,.375X.079X.406X1.5,SS,18-8	416516	32
CS,HH,.313-18X1,SS,316,MOLY,W/EPDM WSHR	416511	12
Assembly Instructions	1016008	1

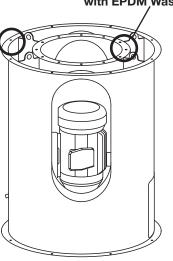

Phone: (715) 359-6171 • Fax: (715) 355-2399 • E-mail: vektor.support@greenheck.com • Website: www.greenheck.com